

# Changing the filter

You will require a pair of work gloves, your new filter's box and a phillips screwdriver.



1 Turn unit to the off position then unplug your Austin Air cleaner from the power outlet.



2 Turn your Austin Air cleaner upside down on a soft surface



3 Using a Phillips screwdriver, remove the four retaining screws from the bottom cover



4 Wearing a protective pair of gloves, lift the bottom cover off & set aside



5 Remove new filter & prefilter from box & put aside



6 Remove old filter & old prefilter from unit & place into empty box



7 Install the new outer prefilter by aligning the prefilter seam with the power cord



8 Install the new filter top side down



9 Replace the bottom cover & screw down tightly



10 Turn your Austin Air cleaner right side up & operate on the High (III) setting for at least one hour

Follow these instructions for best success.  
Regular maintenance will prolong filter life.

Don't forget to vacuum the outside of your unit once a month to prolong the life of your filter.